



Data Sheet CODESYS EtherNet/IP Scanner SL

CODESYS EtherNet/IP Scanner is an additional option for controllers that are compatible with CODESYS. These devices are based on standard Ethernet ports to become EtherNet/IP scanners. The bus is configured from within the CODESYS Development System. Device configured in this way exchange real-time Ethernet messages with connected EtherNet/IP adapters.

Product description

A specific EtherNet/IP configurator is already integrated in the default setup of the CODESYS Development System. In order to use this, the user requires a license, which is already saved on the target system [1] or can be added later [2]. Furthermore, a protocol stack is required for establishing EtherNet/IP communication on the configured Ethernet port. This stack is supplied with the license as a CODESYS library. As an alternative, Hilscher fieldbus adapters can be equipped with an integrated protocol stack.


If CODESYS EtherNet/IP scanner is licensed on the device to be programmed, then it can communicate in real time with connected adapters, read their inputs, and write to their outputs. All parameters for communication are predefined in the configurator. These include IP addresses or network cards and adapters, the connections and their properties, the RPI (Requested Packet Interval), as well as the user parameters. The end user uses a service library to access the remote adapter in non-cyclic intervals from the IEC 61131-3 application (for example in order to read and write attributes).

- [1] Device manufacturers can equip and pre-license their products with CODESYS EtherNet/IP Scanner. The use license is included in SoftSPS systems from 3S-Smart Software Solutions (for example, CODESYS Control Win or CODESYS Control for Raspberry Pi).
- [2] Users can extend individual, compatible devices with CODESYS EtherNet/IP Scanner SL. The license is saved on a special device dongle (CODESYS Key) or software license container (Soft Key) on the target device.

Configurator

For IEC and NetX Stack the same configurator pages are available.

Editors	<ul style="list-style-type: none"> Ethernet Bus Editor EtherNet/IP Scanner Editor EtherNet/IP Remote Adapter Editor
Communication Settings	<ul style="list-style-type: none"> IP Address Electronic Keying EtherNet/IP Connections and configuration data Input/Output Assembly Layout custom specific configuration parameters Connection timeout behaviour (not NetX)
Validation of configuration	supported
Diagnosis	<ul style="list-style-type: none"> Display of device state in device tree Display of connection errors on status page
EDS Import	supported
Generic Device	supported, for devices without EDS file
Device Scan	supported (not NetX)

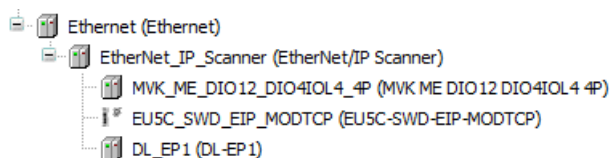

Picture 1: Device Tree

General

Address Settings

IP Address: 192 . 168 . 0 . 2

Electronic Keying

Keying Options

☐ Compatibility Check

☒ Strict Identity Check

☒ Check Device Type 43

☒ Check Vendor Code 322

☒ Check Product Code 102

☒ Check Major Revision 1

☐ Check Minor Revision 6

Restore default values

Picture 2: General communication settings

Connection Name	RPI (ms)	O->T size (bytes)	T->O size (bytes)	Proxy Config size (bytes)	Target Config size (bytes)	Connection Path
1. Exclusive Owner	10	80	80		64	20 04 24 66 2C 64 2C 65
2. Input Only	10	0	80		64	20 04 24 66 2C C1 2C 65


Add Connection... Delete Connection Edit Connection...

Configuration Data

☒ Symbolic values

Parameters	Value	Unit	Datatype	Minimum	Maximum	Default	Help String
Exclusive Owner							
Channel IO-1	1		SINT	1	4	1	Channel selector
Module identifier	INACTIVE		SINT			INACTIVE	Module selector
Data hold time	0		SINT	0	127	0	Data hold time [x 10ms]
ID tag data block size	4 Byte		SINT			4 Byte	ID tag data block size [bytes], can be obtained from the data
Overload detection	On		SINT			On	Overload detection
Overcurrent detection	On		SINT			On	Overcurrent detection
Edge controlled UID reading	Off		SINT			Off	Edge controlled reading of UID
ID tag number of blocks	0		USINT	0	255	0	ID tag number of blocks [bytes], can be obtained from the d
Channel IO-2	2		SINT	1	4	2	Channel selector
Module identifier	INACTIVE		SINT			INACTIVE	Module selector
Data hold time	0		SINT	0	127	0	Data hold time [x 10ms]
ID tag data block size	4 Byte		SINT			4 Byte	ID tag data block size [bytes], can be obtained from the data
Overload detection	On		SINT			On	Overload detection
Overcurrent detection	On		SINT			On	Overcurrent detection
Edge controlled UID reading	Off		SINT			Off	Edge controlled reading of UID
ID tag number of blocks	0		USINT	0	255	0	ID tag number of blocks [bytes], can be obtained from the d

Picture 3: EtherNet/IP Connections

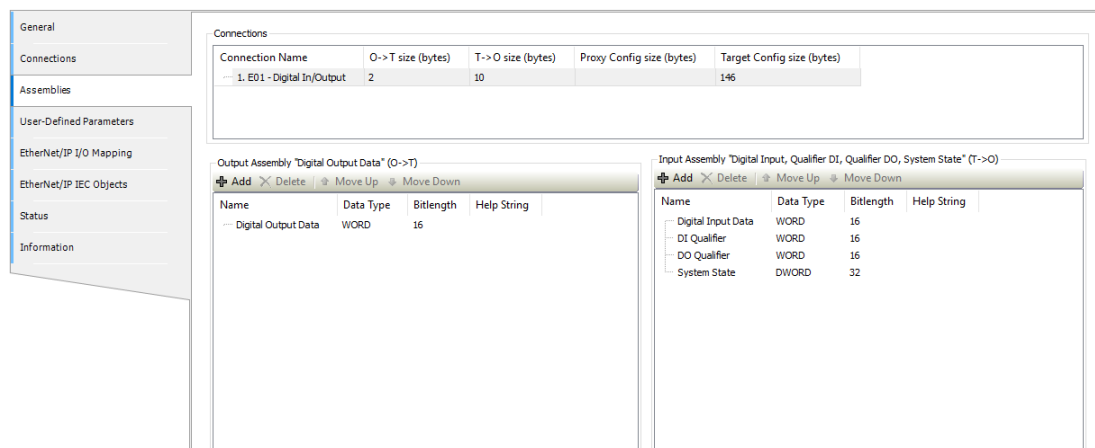

Picture 4: Assembly Layout

IEC Stack

The following table describes the functionality of the CODESYS IEC stack.

Supported Platforms	<ul style="list-style-type: none"> • 32/64 bit • Little/Big Endian
Specification	CIP Networks Library Volume 1 and 2
max. Number of Slaves	no restriction
max. Number of Connections	no restriction
Connection Types	<ul style="list-style-type: none"> • Class 1 (I/O Messaging) • Class 3 (Explicit Messaging) • UCMM
I/O Connection Types	<ul style="list-style-type: none"> • Point to Point and Multicast • Cyclic Transmission • Exclusive Owner, Listen Only, Input Only
minimal RPI	1 ms
Supported Objects	<ul style="list-style-type: none"> • Identity Object • Message Router Object • Connection Manager Object • TCP/IP Interface Object • EtherNet Link Object
Large ForwardOpen	not supported
CIP Motion	not supported
CIP Sync	not supported
Device Level Ring (DLR)	not supported

NetX Stack

For Hilscher NetX Stack functionalities please refer to the Hilscher data sheet.

Supported Platforms	<ul style="list-style-type: none"> • 32 bit • Little Endian
---------------------	---

API

Following functionblocks are available:

EtherNet/IP Services IEC Library

- Get_Attributes_All, Get_Attribute_Single
- Set_Attributes_All, Set_Attribute_Single
- Start/Stop/Reset
- Apply_Attributes
- NOP
- Generic_Service
- Visualization-Templates

The library is also supported by NetX Library!

API IEC Stack

- State and Diagnosis variables for scanner and adapters
- Ethernet Status Information
- Reset of scanner and adapter
- Generic Device Diagnosis
- Reconfigure

API NetX Stack

- Generic Device Diagnosis
- Reconfigure

No additional API functions available.

General information

Vendor:

CODESYS GmbH
 Memminger Strasse 151
 87439 Kempten
 Germany

Support:

<https://support.codesys.com>

Item:

CODESYS EtherNet/IP Scanner SL

Item number:

2303000007

Sales:

CODESYS Store

<https://store.codesys.com>

Included in delivery:

- License key

System requirements and restrictions

Programming System	CODESYS Development System V3.5.5.0 or higher
Runtime System	CODESYS Control V3.5.5.0 or higher
Supported Platforms/ Devices	Note: Use the project "Device Reader" to find out the supported features of your device. "Device Reader" is available for free in the CODESYS Store.
Additional Requirements	<ul style="list-style-type: none"> • CODESYS Control runtime system on the device with SysSocket component • Available Ethernet port on the device • WIBU Codemeter support
Restrictions	-
Licensing	License activation optional on CODESYS Key or Soft Key (Soft Key: free of charge component of CODESYS Controls)
Required Accessories	Optional: CODESYS Key

Note: Not all CODESYS features are available in all territories. For more information on geographic restrictions, please contact sales@codesys.com.

Note: Technical specifications are subject to change. Errors and omissions excepted. The content of the current online version of this document applies.